


# ATA Gateway

## Quick Installation Guide


## Packaging list

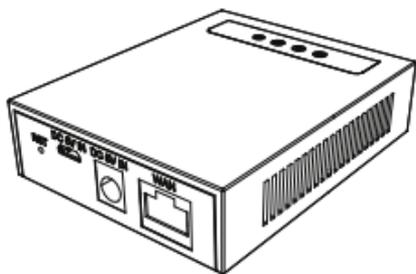

ATA Gateway



Ethernet Cable

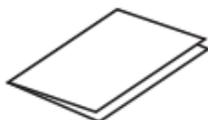

Quick Installation Guide





Power Adapter

## Status indicator

Ports	Icon	Function		
Power		Off: Power is invalid	On: Power supply is normal	
Network		Off: not connected	On: connection is normal	Twinkle: network failure
SIP registration		Off: SIP is not registered	On: registration is successful	Twinkle: registration is failed
FXS		Off: N/A	On: Phone is being off hook	

## Device ports

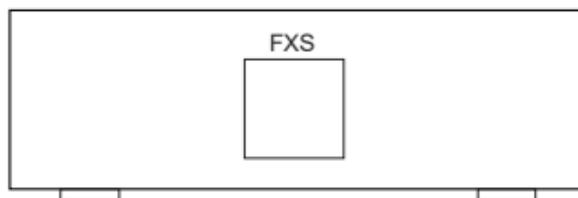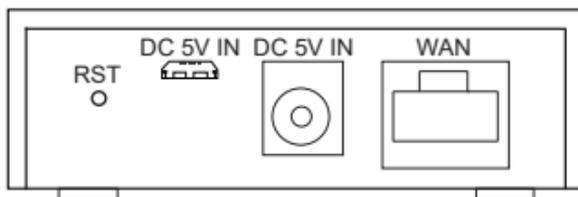

Ports	Icon	Function
Power	DC 5V IN	Connecting to a power source to the micro-USB or DC Jack
Network	WAN	Connecting to the network.
FXS	FXS	Connecting to the analog phone.
Reset	RST	Restore Default button. When the device is working properly, if you press this button (6 seconds) with a sharp object (such as a pencil) until the LED fast twinkling. Restore function will take effect after you release it.

## Device connection

Connect your device, please follow the steps below:

1. Insert a standard RJ11 telephone cable into the FXS port and connect the other end of the telephone cable to a standard touch-tone analog telephone.
2. Insert the ethernet cable into the WAN port of the device and connect the other end of the ethernet cable to an uplink port (a router or a modem, etc.)
3. Insert the power adapter into the device and connect it to a wall outlet.
4. The power and ethernet LEDs will be solidly lit when the device and network is ready for use.

## Configuration

### Configuration via web

1. Connect the computer to the same network as your device and make sure the device is booted up.
2. Use a telephone connected to FXS port of your device.
3. You may check your device IP address using input the corresponding voice menu number on the connected phone.
4. Open the Web browser on your computer.
5. Login: Input the IP address in the web browser. The PC and phone should be in the same IP address segment (The default username and password are both 'admin'.)
6. Configure: Select network/account etc, and fill the relevant content.
7. Save the configuration.

### Configuration via voice menu number of device

1. Use a telephone connected to FXS port of your device.
2. Set by inputting the voice menu number through phone.
3. The list of voice menu numbers is shown below:

<b>Function</b>	<b>Number</b>	<b>Function</b>	<b>Number</b>
Start Reboot	#****	Busy Call Forward	#*91
Enable Static Mode	#*100	No Ans Call Forward	#*92
Enable DHCP Mode	#*101	Always Call Forward	#*93
Enable PPPOE Mode	#*102	Voice Mail	#*86
Read WAN IP	#*111	Call Back	#*87
Read Phone Number	#*222	Redial	#*88
Set WAN IP Addr	#*50	DND ON	#*94
Set WAN Gateway	#*51	DND OFF	#*95
Set WAN DNS	#*52	Blind Transfer	#*27
Set WAN Subnet Mask	#*53	Attended Transfer	#*28
Disabled Call Forward	#*90	Conference(Conf)	#*29